

OWNERS MANUAL ADDENDUM



Model: Defender Series

Number: 28041-9022

Date: 5/29/2013

Release: 41423

Subject: 1040XL Deluxe Scales - Auto Unload Feature

1. Load Seed Caddy with Pro-Boxes.
2. Operator prefers the readout to show unloaded weight: **ZERO** the scale, either by using wireless remote or pressing **ZERO** on the scale.
Operator prefers the readout to show total gross weight: Skip step two and continue with step three.
3. Enter desired unload weight using the numerical key pad on the scale.
4. Press **LOAD/UNLOAD**.
5. When ready to unload, press the **AUTO** button on the wireless remote. The seed caddy will unload until that weight is unloaded and stop.
6. To continue on with the next box, reset the Auto Unload feature by pressing **ZERO** on the remote or the scale and press **AUTO** again.
7. To clear and change the unload weight, press **MENU** then **GROSS** and repeat steps three through six.

NOTE: When filling individual seed boxes, stop using the Auto Unload Feature a few boxes before finishing filling the planter. It is recommended to close Pro-Box door and use the manual unload, **FWD**, to do the final boxes. By doing this the operator cleans out the seed delivery shoots and auger on the seed caddy.

